




Alarm Icons

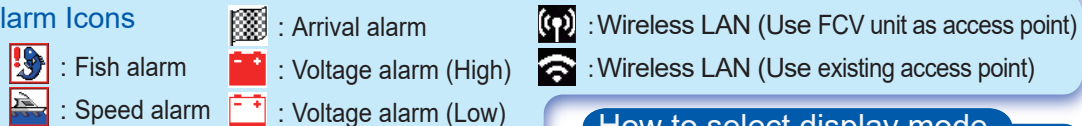

Display mode, frequency, sensitivity mode/value

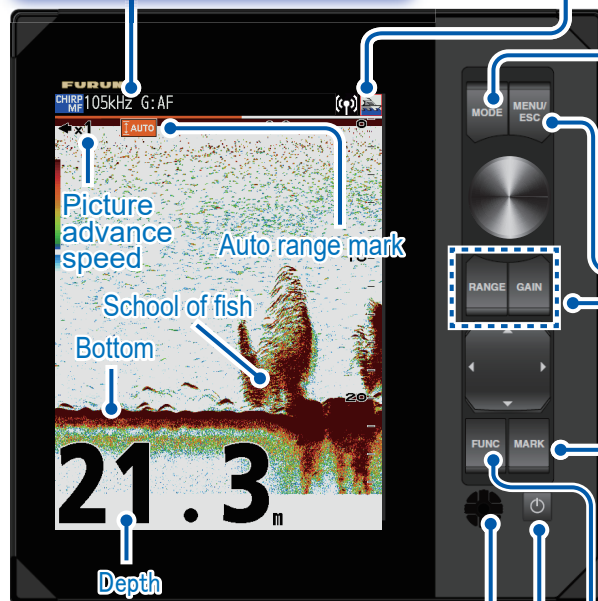

How to select display mode

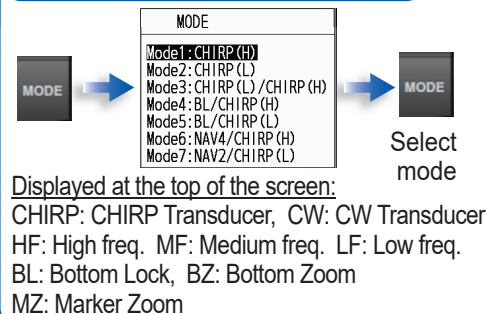

Opens/Closes the menu


How to register waypoint

(Navigation connection required)




How to use FUNCTION key


How to open the registered setting window

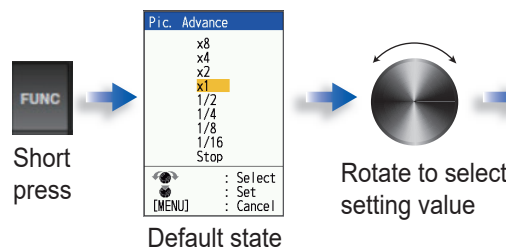

How to register an item for instant display

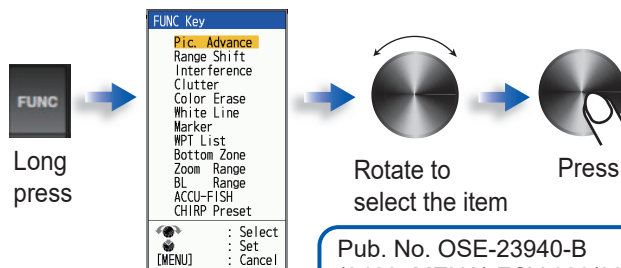


How to adjust the brilliance/panel dimmer

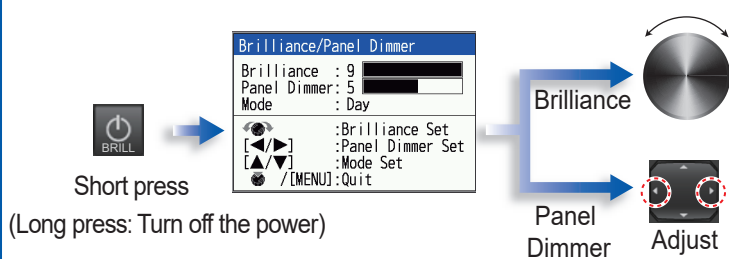


How to choose a range

(Disabled when using the bottom discrimination function.)

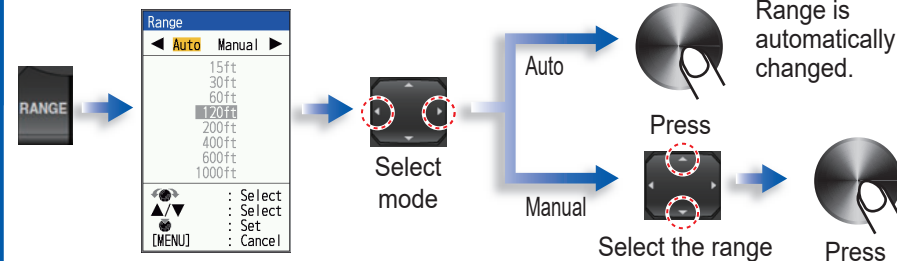

How to adjust the gain

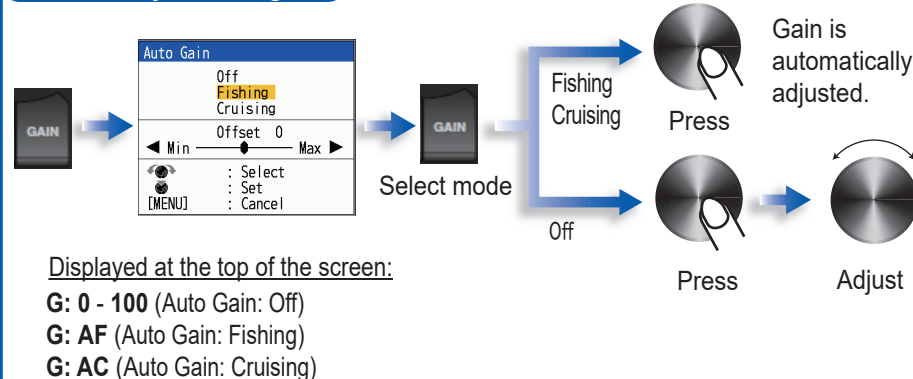

Displayed at the top of the screen:
G: 0 - 100 (Auto Gain: Off)
G: AF (Auto Gain: Fishing)
G: AC (Auto Gain: Cruising)