


ALARM/ACK:

- Short press to turn off the alert buzzer.
- Long press to show the Alert List.




Power ON/OFF


How to use FUNC key

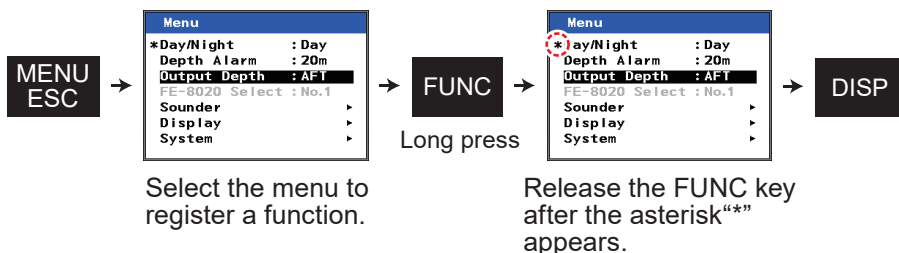


How to select the menu

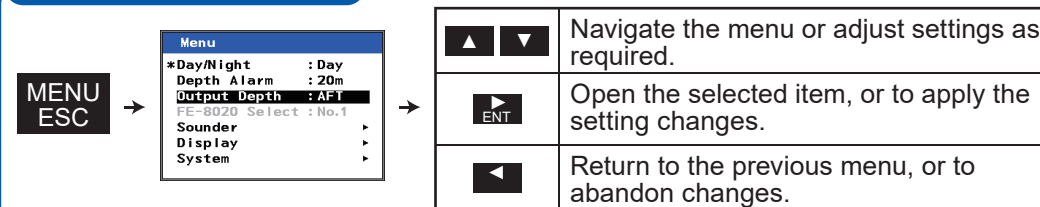



How to adjust the gain

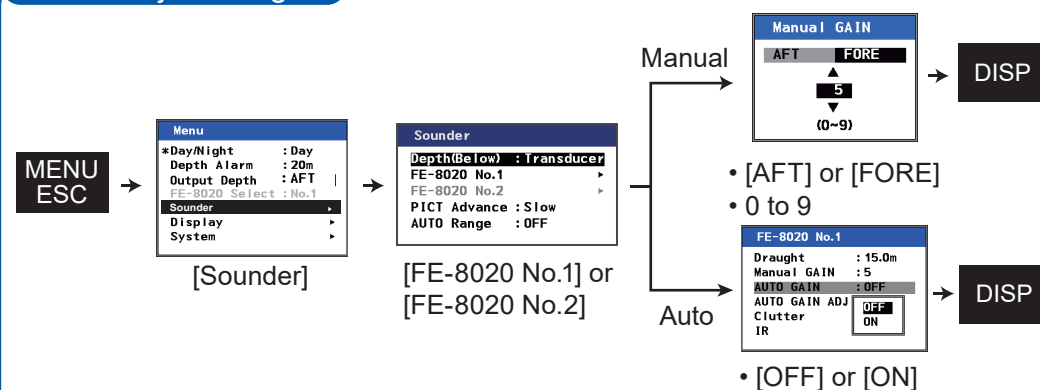

How to select the display mode

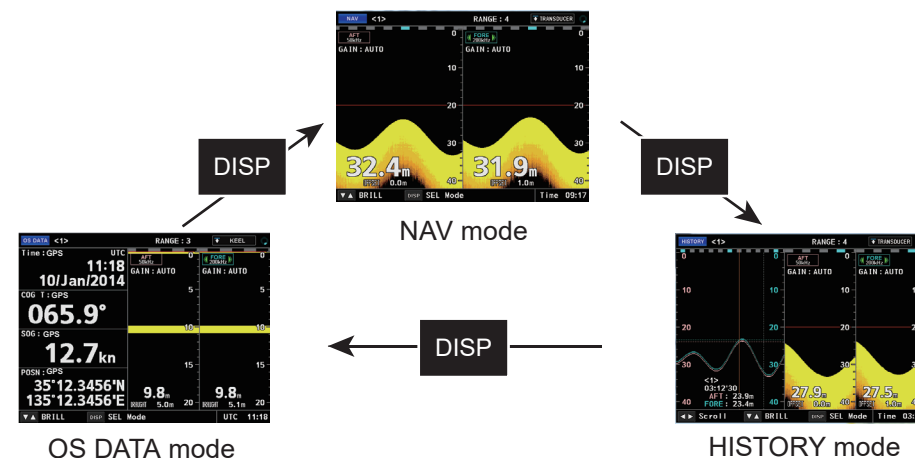

How to adjust display and panel brilliance

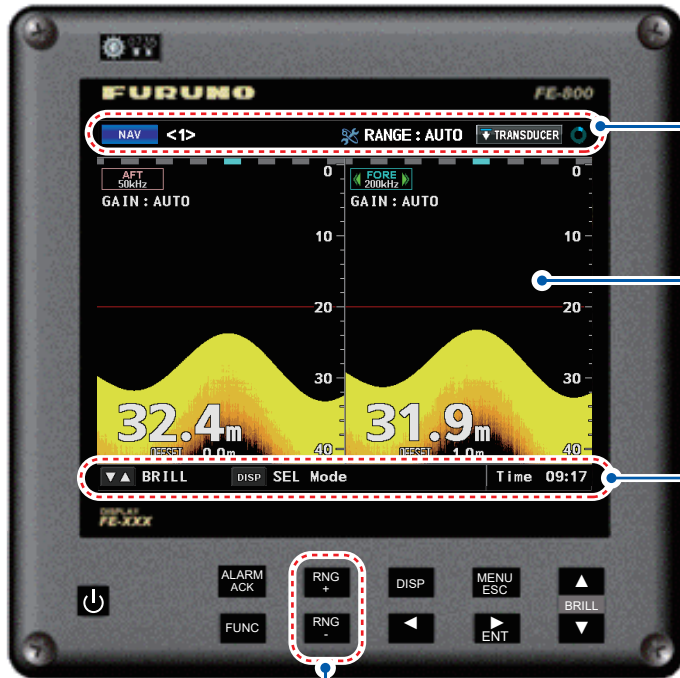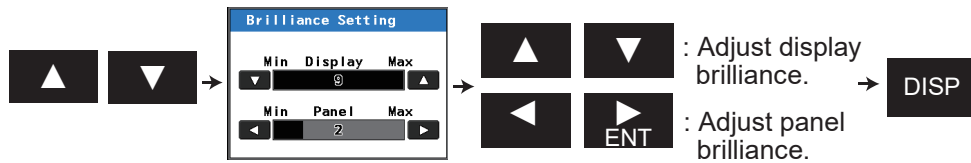

Trasceiver No.
(Current selected transceiver)

Range setting
(Current selected range)

System status indicator
(Indicates whether the system is operating normally)




Mode indicator

- [NAV]: NAV mode
- [HISTORY]: NAV + HISTORY
- [OS DATA]: NAV + OS DATA

Remote maintenance icon
(Indicates that the remote access is available for remote maintenance.)

Reading indicator
(Current selected reference point for depth)

NAV mode

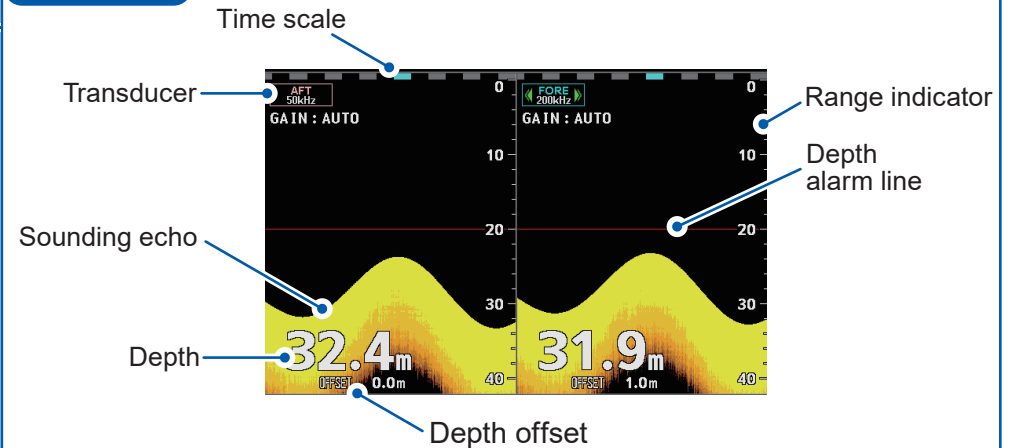


How to select a range

Manual setting

RNG + : Increases depth range. **RNG -** : Decreases depth range.

Auto setting

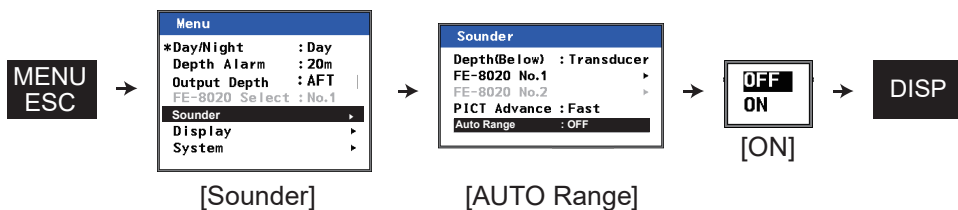

Alert message or menu description
(Active alert or a brief description of the selected menu item)

Time
(Time and time setting UTC, Local, Time)

