FURUNO

English

INMARSAT FLEET BROADBAND Operator's Guide

Model FELCOM251/FELCOM501

The purpose of this guide is to provide the basic operation for this equipment. For detailed information, see the Operator's Manual in the supplied CD-ROM.

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

Before Starting


1. Insert the SIM card into the Communication Unit and press the Power switch.
2. If set to require PIN code at startup, enter SIM PIN code. IP Handset can be used when & appears on screen.

Icons on status bar
- : Reception level
- : Voice ready (green)
- : Voice not ready (white)
- : Data transmission ready (green)
- : Data transmission not ready (white)

Icons on status bar
- : Safety Voice Handset
- : FX mode
- : Missed call
- : Unread SMS message
- : Unread event
- : Clock



Softkey guide

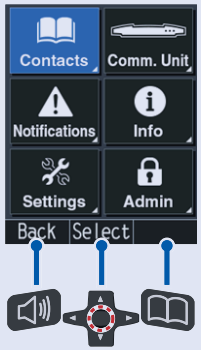

Brilliance adjustment

Increase brilliance

Main screen / Other screens: 0 +


Decrease brilliance

Main screen / Other screens: 0 +


- : Increase volume, Select item
- : Decease volume, Select item
- : Select item
- : Open main menu, Variable softkey

Phone


Placing a call

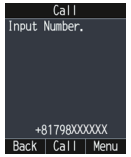

Input number at main screen (BACK DEL to erase)

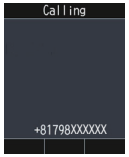


(Transmitting)

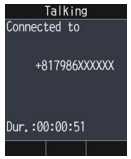

Start conversation (Connected)

End call

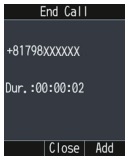


Display duration


Go back to main screen

- Land Call: 00, Country code, recipient number
- Ship call: 00, Ocean region number (870), Inmarsat number
- Internal: 4-digit number

Answering a Call

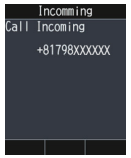


(IP Handset rings)

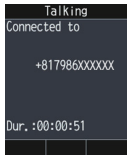

Start conversation (Connected)

End call

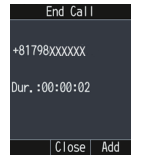


Display duration

Go back to main screen

Adjusting IP Handset volume


During conversation

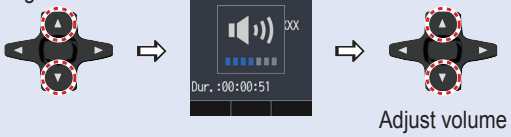

Adjust volume

Placing a call on hold

During conversation




(On hold)

Release hold

History

Display Outgoing/Incoming History

At main screen

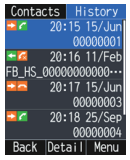

- : Received
- : Called
- : Communication successful
- : Communication failed
- : Missed

Pressing the key in the [History] screen provides for the following functions:
- Place call
- Add to [Contacts] list
- Delete history

FURUNO

インマルサット フリートブロードバンド

日本語 型式 FELCOM251/FELCOM501 操作要領書

この操作要領書は初歩的･基本的な操作のみを述べています。詳しい操作については、製品に同梱されているCD-ROM（取扱説明書）を参照してください。

本マニュアルに記載されている社名、製品名は、一般に各開発メーカーの登録商標または商標です。

通信を始める前に

1. 通信制御ユニットにSIMカードを挿入し、電源を投入します。
2. PINコードを要求された場合は、PINコードを入力します。
   ハンドセットの画面上に▮と▮が表示されたら、通信を開始できます。

ステータスバー上のアイコン

- ▮：受信信号レベル
- ▮（緑）：音声通話可能
- ▮（白）：音声通話準備中
- ▮（緑）：データ通信中
- ▮（白）：データ通信準備中

ステータスバー上のアイコン

- ▮：セーフティボイス用ハンドセット
- FX：FX モード
- ▮：不在着信
- ▮：新着 SMS メッセージ有り
- ▮：イベント有り
- 14:21：時刻



自船の緯度 / 経度
使用中の衛星名
データ通信の状態

日付 / 時刻
音声通信の状態
待受画面

- ･音量調整画面を開く
- ･ソフトキーとして使う


通話中の電話を保留する
- ･発信画面を開く
- ･電話をかける
- ･電話を受ける

- ･アドレス帳/通話履歴を開く
- ･ソフトキーとして使う

衛星選択画面を開く

- ･待受画面に戻る
- ･電話を切る
- ･電話の発信を中断する
- ･長押し：ハンドセットを再起動する

ソフトキーの使い方

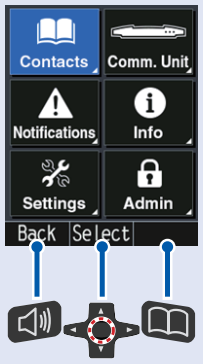

で操作を実行

画面の輝度調整


輝度を上げる
- 待受画面
- 待受画面以外：0 ＋

輝度を下げる
- 待受画面
- 待受画面以外：0 －


- ･音量を上げる ･項目を選ぶ
- ･音量を下げる ･項目を選ぶ
- ･項目を選ぶ
- ･メインメニューを開く ･ソフトキーとして使う

電話


電話をかける

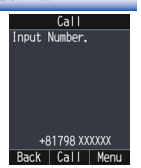

待受画面で相手先の番号を入力する（訂正は BACK DEL ）

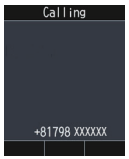


（発信中）

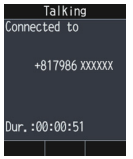

相手が出たら話す（通話中）

通話を終了

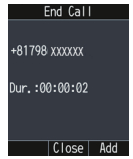


通話時間を表示


待受画面に戻る

- ･陸上宛：「00」、国番号、電話番号
- ･船舶宛：「00」、海域番号(870)、インマルサットの番号
- ･内線通話：4桁の内線番号

電話を受ける

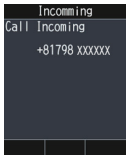


（着信音が鳴る）

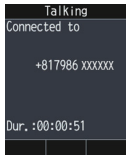

相手と話す（通話中）

通話を終了

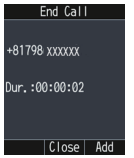


通話時間を表示

待受画面に戻る

受話音量を調節する

通話中に



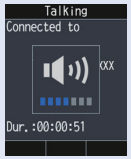




音量を調節する

通話を保留する

通話中に



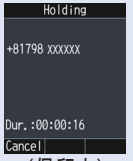

（保留中）





保留を解除する

履歴

着信/発信履歴を開く

待受画面で



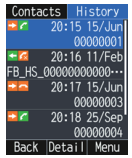

- ▮：着信履歴
- ▮：発信履歴
- ▮：通話成功
- ▮：通話失敗
- ▮：不在着信

着信/発信履歴画面で▮を押すと、次の操作が可能
- ･電話の発信
- ･アドレス帳への登録
- ･履歴の削除

Pub. No. OSC-57050-B
(2109, REFU) FELCOM251/501
Printed in Japan

00019588211