FURUNO

Installation Manual
REMOTE DISPLAY
Model RD726/RD926/RD1226W

Safety Instructions ..... **i**
System Configuration ..... **ii**
Equipment Lists ..... **iii**
Standard Supply iii
Optional Supply iii

1. Mounting **1**
1.1 Installation of Remote Display 1
Mounting Considerations 1
Security Risk Considerations 2
1.2 Flush Mounting 2
Installation Procedure 2
How to Remove the Screw Covers 4
1.3 Bracket Mounting (for RD726/RD926 only) 4
Installation Procedure 5

2. Wiring **6**
2.1 Interface Connections 6
2.1.1 RD726 and RD926 6
2.1.2 RD1226W 6
2.2 Power Cable 7
2.3 Grounding Wire 7
2.4 Network Connection with Command Center Devices 7
2.5 NMEA 2000 Connection 8
2.5.1 NMEA 2000 Input/Output 8

3. How to Set Up the Equipment **10**
3.1 How to Turn the Power On/Off 10
3.2 How to Adjust the Screen Brightness 11
3.3 How to Add a New Page 11
3.3.1 Freeform Layout 12
3.3.2 Template Layout 13
3.4 How to Delete Pages 13
3.5 How to Edit Pages 14
3.6 How to Upgrade Firmware via USB 14
3.7 How to Use Screen Mirroring 15

APPX. 1 OUTLINE DRAWINGS
RD726 OUTLINE
RD926 OUTLINE
RD1226W OUTLINE

FURUNO ELECTRIC CO., LTD.
www.furuno.com

The brand, product names, trademarks, registered trademarks, or service marks mentioned in this document belong to their respective holders.

⚠SAFETY INSTRUCTIONS

Follow the safety instructions listed below and throughout this manual to prevent damage to your equipment or vessel and to prevent harm to the operator or other personnel on-board. The results of failing to follow the instructions and guidelines outlined herein are listed below.

⚠ WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
⚠ CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

(Examples of symbols)

 Warning, Caution

 Prohibitive Action

 Mandatory Action

⚠ WARNING



Do not open the equipment.

Only qualified personnel should work inside the equipment. There are no serviceable or replaceable parts inside the equipment.



Do not disassemble or modify the equipment.

Fire or electrical shock can result if the equipment is modified.



Turn off the power at the switchboard before beginning the installation.

Fire or electrical shock can result if the power is left on.



Be sure that the power supply is compatible with the voltage rating of the equipment.

Connection of an incorrect power supply can cause fire or damage the equipment.



Immediately turn off the power at the switchboard if water leaks into the equipment.

Continued use of the equipment can cause fire or electrical shock.

About the TFT LCD

The TFT LCD is constructed using the latest LCD techniques, and displays 99.99% of its pixels. The remaining 0.01% of the pixels may drop out or are constantly lit. Additionally, the LCD has a limited viewing angle and may flicker. However, these are not indications of malfunction.

⚠ CAUTION



Ground the equipment to prevent electrical shock and mutual interference.



Use the proper fuse.

Use of an incorrect fuse may damage the equipment.



The front panel is made of glass.

Handle it with care.
Injury can result if the glass breaks.



Do not use high-pressure cleaners to clean this equipment.

This equipment is rated IP56 for water resistance. However, high-pressure cleaning may cause water intrusion, resulting in damage to or failure of the equipment.



Be sure to attach caps to all unused connectors.

The unit may be damaged. Electrical shock can result.




Observe the following compass safe distances to prevent interference to a magnetic compass:

Model	Standard compass	Steering compass
RD726	0.55 m	0.50 m
RD926	0.55 m	0.50 m
RD1226W	0.55 m	0.50 m

SYSTEM CONFIGURATION

····· : Optional/local supply

—— : Standard supply/connectivity

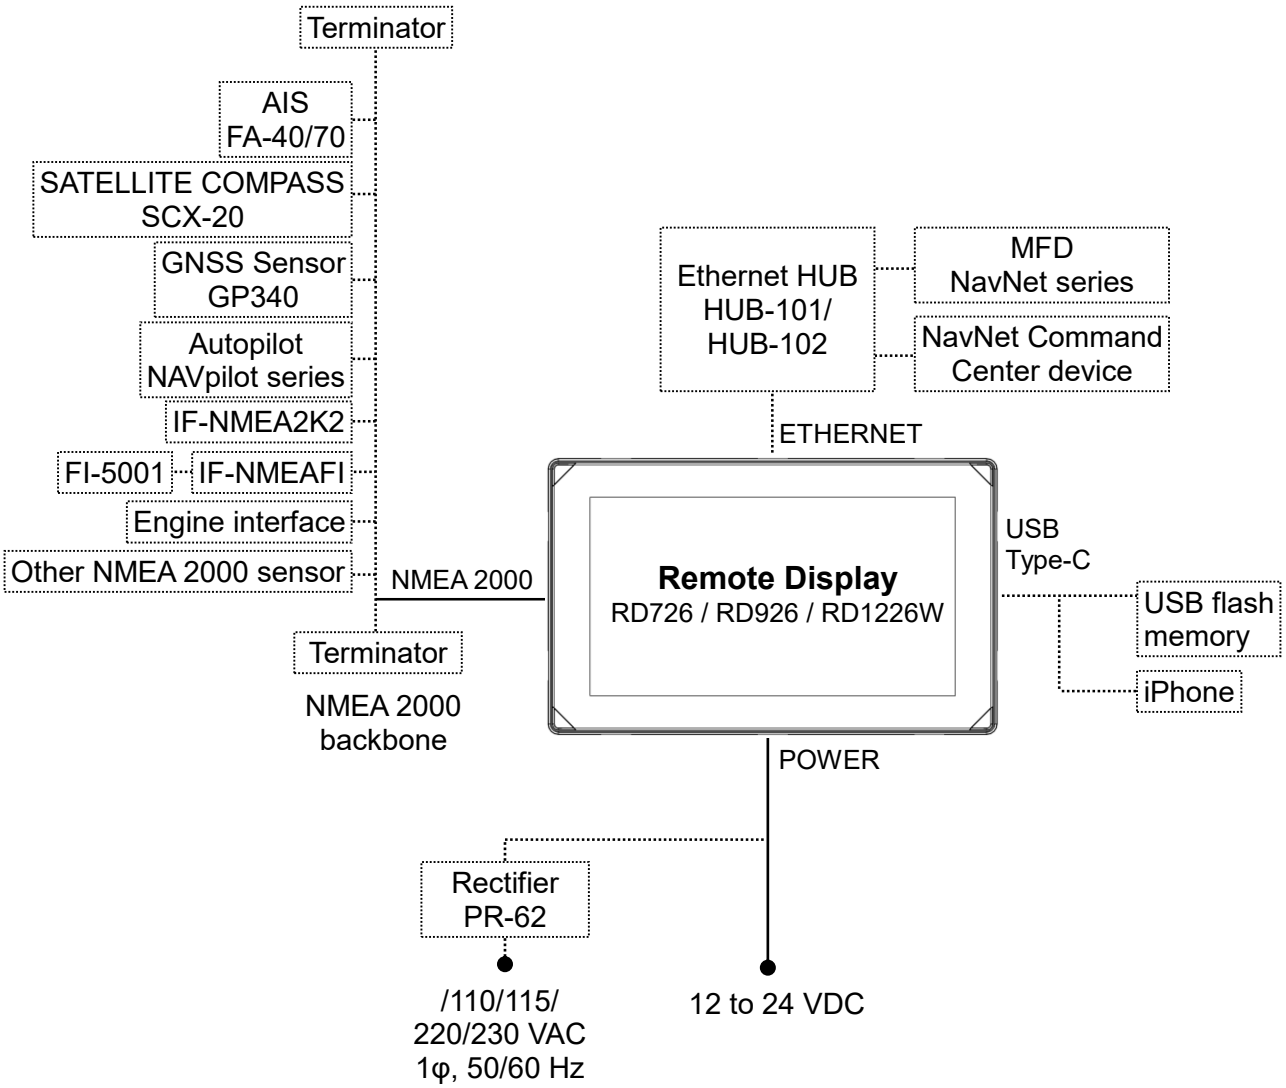

EQUIPMENT LISTS

Standard supply

Name	Type	Qty		
		RD726	RD926	RD1226W
Remote Display	61010010360061	1	-	-
Remote Display	61010010360062	-	1	-
Remote Display	61010010360063	-	-	1
Screw Cover	5116000360786A	8*	8*	8*
Protective Cover (7”)	5110990360221A	1	-	-
Protective Cover (9”)	5110990360222A	-	1	-
Protective Cover (12”)	5110990360223A	-	-	1
NMEA 2000 Cable (6m)	5105990000783A	1	1	1
Power Cable (Straight)	61110000060181	1	1	1
Flush Mount Screws (PA3.5*20)	5107000000173A	4	4	4
Flush Mount Gasket (7”)	5113050360201A	1	-	-
Flush Mount Gasket (9”)	5113050360202A	-	1	-
Flush Mount Gasket (12”)	5113050360203A	-	-	1
Flush Mount Template (7”)	X5003001337	1	-	-
Flush Mount Template (9”)	X5003001339	-	1	-
Flush Mount Template (12”)	X5003001341	-	-	1
Installation Manual	5202990363131A	1	1	1
Packing List (7”)	X5003001343	1	-	-
Packing List (9”)	X5003001345	-	1	-
Packing List (12”)	X5003001347	-	-	1

*Including spares

Optional Supply

Name	Type	Remarks
Power Cable (L-angle)	61060000360961	
Screen Mirroring Kit	61060000360863	Kit includes: USB Type-C cable (1 m) × 1 NMEA 2000 connector cap × 1
Hanger Kit (7”)	61060000360864	Kit includes: External Bracket (7”) × 1 Knob × 2 External Bracket Fixing Screws × 4
Hanger Kit (9”)	61060000360865	Kit includes: External Bracket (9”) × 1 Knob × 2 External Bracket Fixing Screws × 4
NMEA Data Converter	IF-NMEA2K2	
Analog NMEA Data Converter	IF-NMEAFI	
Wind Transducer	FI-5001	
Ethernet HUB	HUB-101	
	HUB-102	

Name	Type	Remarks
Rectifier	PR-62	100/110/220/230 VAC
Network (LAN) Cable	FRU-RZWPNWP-002G	Single connector waterproofed
	FRU-RZWPNWP-005G	
	FRU-RZWPNWP-010G	
	FRU-RZWPWP-002G	Dual connector waterproofed
	FRU-RZWPWP-005G	
	FRU-RZWPWP-010G	
Joint Box	TL-CAT-012	For LAN network
Connector	RZCDP08G5E-KLG7001	Waterproofed RJ45 plug
Waterproof Extension Cable	FUSA-RPZG5E-A	Adapter for waterproofed RJ45 to non-waterproofed RJ45, 0.5 m
NMEA Cable Assy.	FRU-NMEA-PMMFF-010	1 m, two connectors
	FRU-NMEA-PMMFF-020	2 m, two connectors
	FRU-NMEA-PMMFF-060	6 m, two connectors
	FRU-NMEA-PFF-010	1 m, single connector
	FRU-NMEA-PFF-020	2 m, single connector
	FRU-NMEA-PFF-060	6 m, single connector
	FRU-MM1MF1MF1001	T connector
	FRU-MM1000000001	Male, terminator
	FRU-MF000000001	Female, terminator

1. MOUNTING

1.1 Installation of Remote Display

- RD726/RD926: Supports flush mounting and bracket mounting.
- RD1226W: Only supports flush mounting.

The installer of this equipment must read and follow the instructions in this manual. Wrong installation or improper maintenance can void the warranty.

Mounting considerations

When selecting a mounting location for RD726, RD926 and RD1226W, keep the following in mind:

- The temperature at the mounting location shall be between -15°C and +55°C.
- The humidity at the mounting location shall be 93% or less at 40°C.
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
  - Mount the unit where shock and vibration are minimal.
- Keep the unit away from electromagnetic field generating equipment such as motors and generators.
- For maintenance purposes, leave sufficient space around the unit and leave slack in cables. Minimum recommended maintenance space is shown in the outline drawing for the display units.
- A magnetic compass will be affected if the equipment is placed too close to it. Observe the compass safe distances shown in "SAFETY INSTRUCTIONS" to prevent disturbance to the magnetic compass.
- Reinforce the mounting surface with a backing plate in the following cases:
  - The mounting surface is thin or lacks sufficient strength.
  - The unit is expected to be removed and reinstalled repeatedly.
- To protect the display from UV exposure and direct sunlight when not in use, wipe off any seawater from the surface and attach the supplied protective cover after use.

Security risk considerations

To reduce the risk of theft and ensure security, it is recommended to take the following measures:


- Secure the unit to the mounting location using a cable lock to prevent unauthorized removal of the unit.
- Install the unit in a locked location on the vessel so that it cannot be easily stolen.
- If an unused Ethernet port is left accessible, unauthorized devices may be connected to the network and network traffic may be intercepted.
- Due to the specifications of NMEA 2000, the transmission data can be intercepted and tampered. Check regularly to make sure that no suspicious devices are connected to the NMEA 2000 network.
- Incidents and accidents exploiting the AIS/DSC signals are reported. Never rely solely on the received signals and messages on the screen. Always maintain a vigilant watch while underway.

1.2 Flush Mounting

Referring to the figure below, select a flat mounting surface. Read the installation instructions before starting. Pay particular attention to the notes; failure to follow these instructions may cause damage to the unit.

Note 1: Do not install the unit in a completely horizontal, upward-facing orientation. To maintain waterproof performance and ensure proper drainage, the unit must be mounted with a slight inclination.

Note 2: Ensure the mounting surface is flat, with no indents or protrusions, to allow a secure fit.

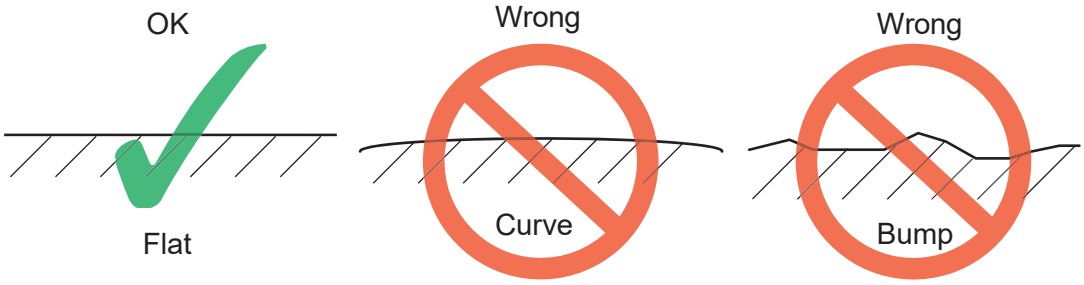


Installation Procedure

1. Prepare a cutout in the mounting surface using the supplied mounting template.

2. Drill holes at each screw location (4 places) using the supplied mounting template.
   Note: Follow the dimensions on the mounting template to ensure proper installation.


3. Attach the flush mount gasket to the rear of the unit,
   Note: Place the unit face-down on a soft, clean surface to prevent damage to the LCD.

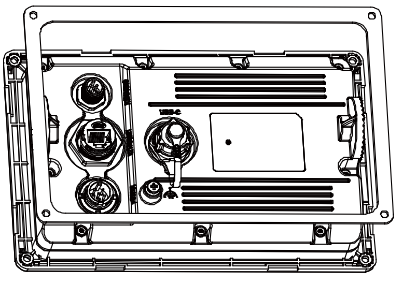


4. Connect all cables to the rear of the unit before installation.
   Note: Leave sufficient cable slack to prevent pulling or pinching the cables during installation.

5. Place the unit into the cutout and align the screw holes. Make sure that no cables are pinched or obstructed.


6. Secure the unit to the mounting surface with the supplied PA3.5×20 flush mount screws. Tighten the screws evenly in a diagonal sequence to prevent deformation of the unit.
   Note: Keep the screw protective covers in place while tightening the screws to prevent damage to the glass and housing.

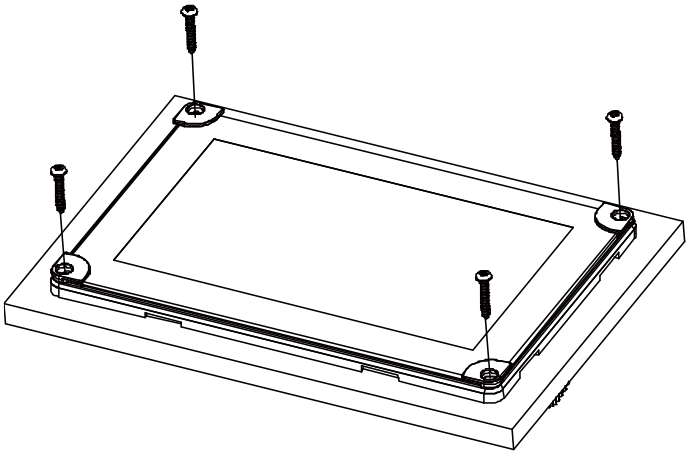

7. Remove the screw protective covers on the screen.

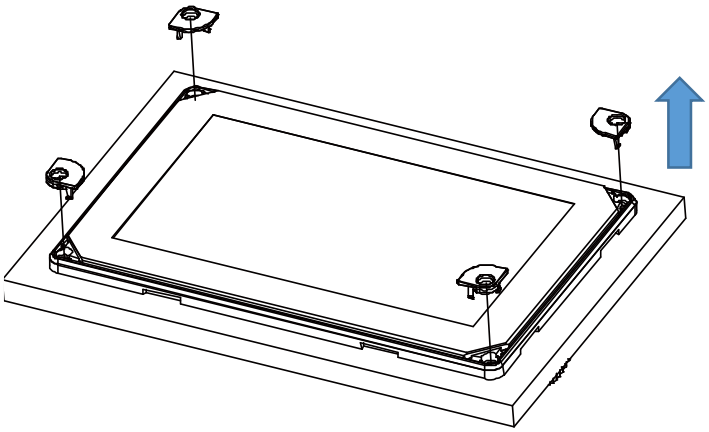


8. Fit the screw covers to the four front corners of the unit. Make sure that each cover is securely attached.
   Note: Do not use excessive force when removing the screw cover. Use of excessive force can damage the cover and the unit.

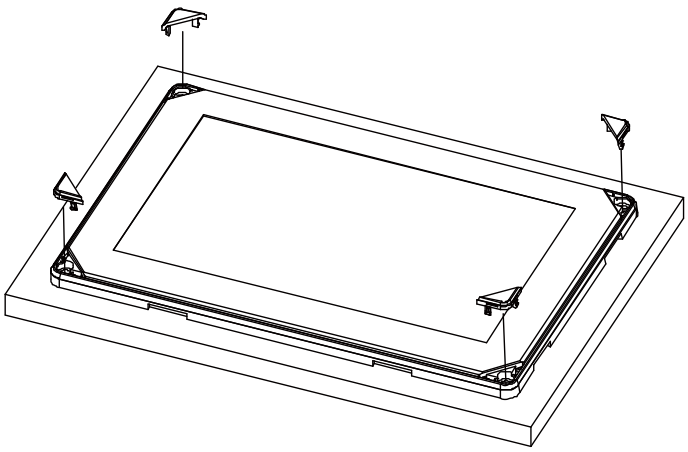

How to remove the screw covers

Incorrect removal methods may damage the screw cover and the unit. Therefore, please follow the removal procedure below closely.

1. Insert the blade of a flat-head screwdriver into the release point at one end of the screw cover.

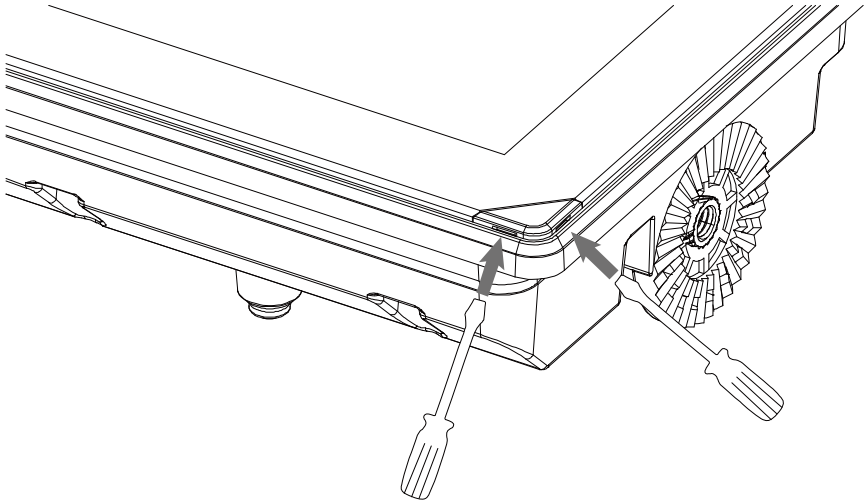

2. Turn the screwdriver gently until a click is heard to release the screw cover.
   Work gradually from one end to the other, and remove all four corner screw covers completely.

   Note 1: Do not pry from the middle or use excessive force, as this may damage the screw covers or casing.
   Note 2: Do not use sharp tools or excessive force, as this may scratch or damage the unit.


1.3 Bracket mounting (for RD726/RD926 only)


Bracket mounting requires the optional Hanger Kit (sold separately).
Follow the appropriate procedure below to mount the unit.

Note: Use fasteners appropriate for the material and thickness of the mounting surface. Reinforce the mounting surface if necessary.

Service Clearance


Unit sides: Min. service clearance ≥ 80.0 mm
Unit rear: Min. service clearance ≥ 120.0 mm
Reserve space for cabling, interface service and ventilation.
Ensure adequate clearance for future maintenance.

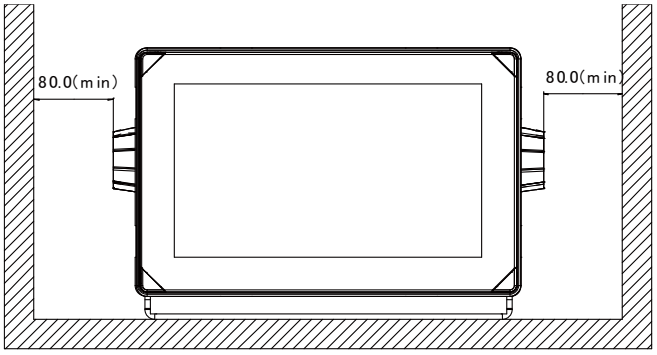

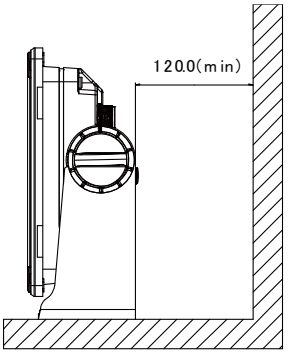

Installation Procedure

1. Secure the bracket to the mounting surface with the four screws. Make sure that all screws are fully tightened and that the bracket is securely fixed.

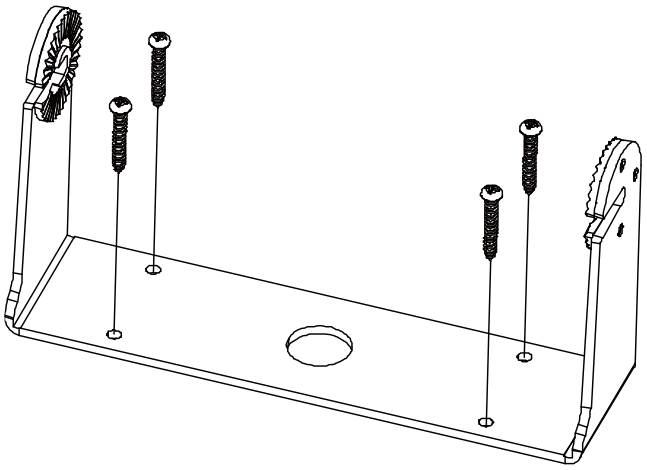

2. Place the unit face down on a soft, clean surface, then loosely install the knobs on both sides of the unit.
   Note: Do not fully tighten the knobs at this stage. Leave enough clearance to install the unit onto the bracket.

3. Connect all required cables to the rear of the unit.

4. Align the knobs with the slots in the bracket, then place the unit onto the bracket. Make sure that both sides of the unit are securely engaged with the bracket. Make sure that no cables are pinched between the unit and the bracket.


5. Adjust the unit to the desired viewing angle, then tighten the knobs evenly on both sides to secure the unit.

2. WIRING


2.1. Interface Connections

To maintain the waterproof integrity of the unit, securely attach the waterproof caps to all unused ports.

2.1.1. RD726 and RD926

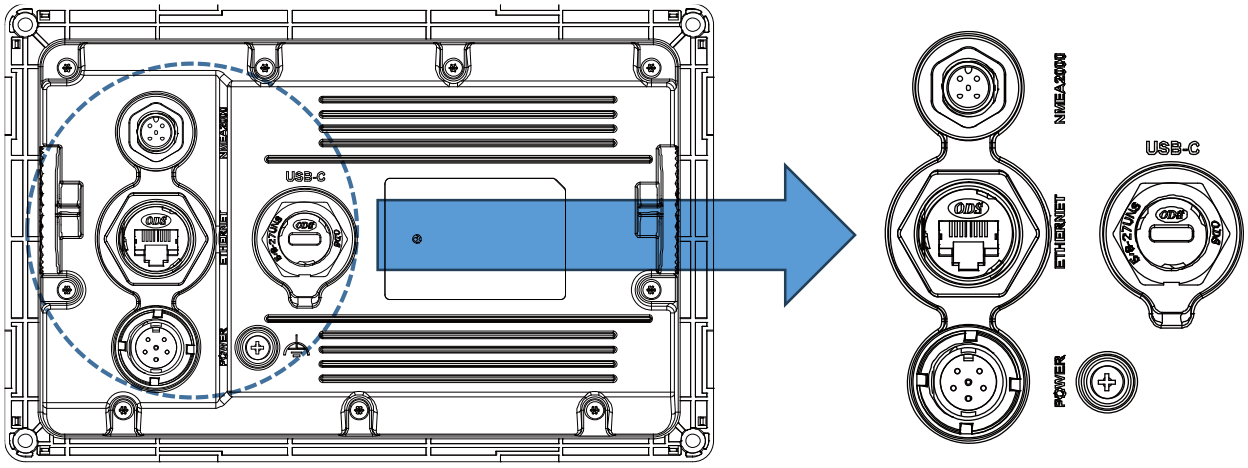

2.1.2. RD1226W

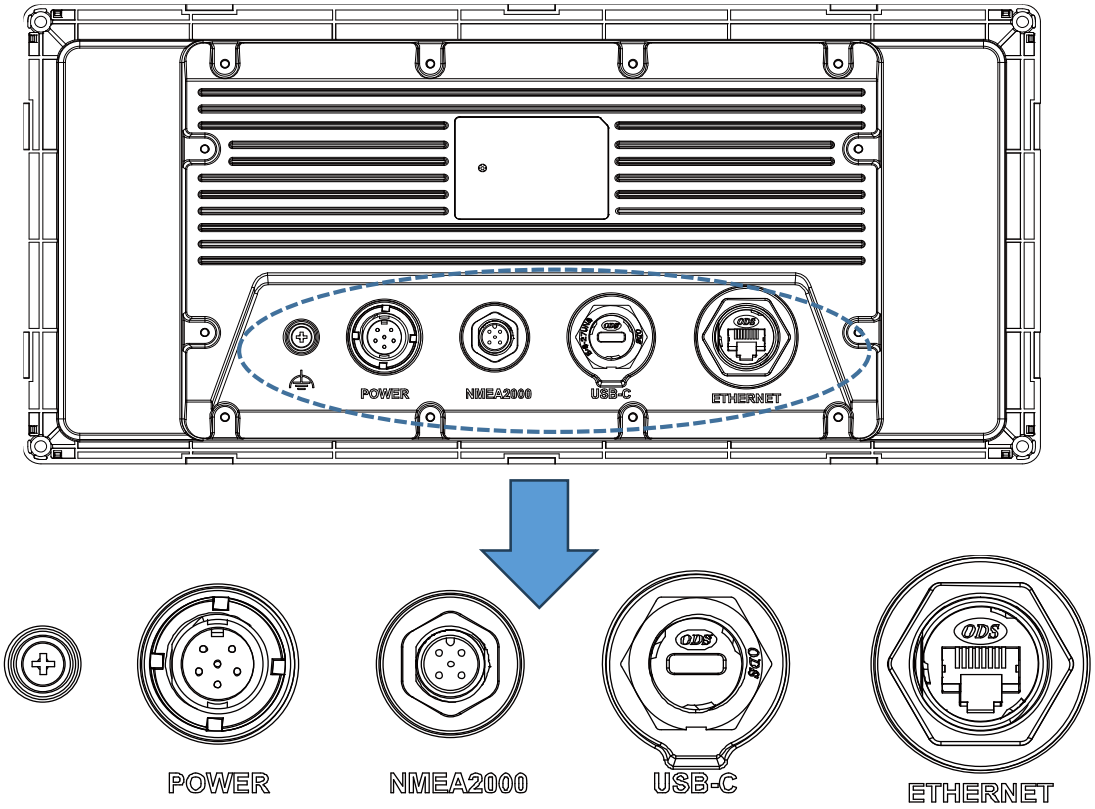

Ground terminal
Connect the ship's ground. See section 2.3.

POWER port
Connect the power supply. See section 2.2.

NMEA 2000 port
Connect the unit to the NMEA 2000 backbone through this port. See section 2.5 for connection requirements.

USB Type-C port
The USB Type-C port is used for firmware upgrade, screen mirroring, and importing ENC files (for Command Center).

ETHERNET port
You can connect Command Center devices using a LAN cable. When connecting multiple devices, use the optional HUB-101 or HUB-102 Ethernet HUB.

Note: If you cut off the waterproofed plug from the LAN cable to pass the cable through a pipe or other narrow opening, attach the optional waterproofed RJ45 plug (RZCDP08G5E-KLG7001) or use the optional waterproof extension cable (FUSA-RPZG5E-A) after routing the cable.

2.2. Power Cable
Connect the supplied Power Cable (straight) to the POWER port. When connecting the power supply, make sure that the positive and negative terminals are connected correctly. If space behind the unit is limited, use the optional Power Cable (L-angle) for easier cable routing.

Note 1: A fuse is installed in the power cable to protect the electrical circuits. Do not remove or bypass the fuse.

Note 2: Turn off the power at the switchboard before beginning the connection.

2.3. Grounding Wire
Connect a ground wire (IV-8 sq., local supply) to the ground terminal on the rear panel using a crimp-on lug (⌀ 5, local supply). Connect the other end to the ship's ground.

2.4. Network Connection with Command Center Devices
The RD remote display is equipped with an Ethernet (RJ45) connector and can display information from and control a NavNet Command Center device over an Ethernet connection. When connecting the unit through an Ethernet switch, make sure that a DHCP server is available on the network.

2.5. NMEA 2000 Connection

The RD726/RD926/RD1226W has one NMEA 2000 connector (micro type connector). The RD can synchronize certain settings with an MFD or another RD via NMEA 2000. To use this function, connect the units to the same NMEA 2000 backbone.

What is NMEA 2000?

NMEA 2000 (also known as CAN bus) is a communication protocol that shares multiple data and signals through a single backbone cable. You can simply connect any NMEA 2000 devices onto the backbone cable to expand your network on-board. With NMEA 2000, IDs are assigned to all the devices in the network, and the status of each sensor in the network can be detected. All the NMEA 2000 devices can be incorporated into the NMEA 2000 network. For detailed information about NMEA 2000 wiring, see "FURUNO CAN bus Network Design Guide" (Type: TIE-00170).

Note 1: The NMEA 2000 network requires a dedicated NMEA 2000 power supply. Turn the NMEA 2000 network power on before turning your connected equipment on.
Note 2: Terminators must be installed at both ends of the NMEA 2000 backbone cable.

2.5.1. NMEA 2000 input/output

Input PGN

PGN	Description
059904	ISO Request
061184	Self-Test Group Function
060928	ISO Address Claim
065240	ISO Commanded Address
065280	Heave
126208	NMEA - Request group function
	NMEA - Command group function
	NMEA - Acknowledge group function
	Reset Group Function
	GMM Message
	Test mode
126983	Alert
126985	Alert Text
126992	System Time
126996	Product Information
127237	Heading/Track Control
127245	Rudder
127250	Vessel Heading
127251	Rate of Turn
127252	Heave
127257	Attitude
127258	Magnetic Variation
127488	Engine parameters, Rapid Update
127489	Engine Parameters, Dynamic
127493	Transmission Parameters, Dynamic
127496	Trip Fuel Consumption, Vessel
127497	Trip Fuel Consumption, Engine
127505	Fluid Level
128259	Speed, Water Referenced
128267	Water Depth
128793	Instrument Backlight Synchronization
129025	Position, Rapid Update
129026	COG & SOG, Rapid Update
129029	GNSS Position Data
129033	Local Time Offset
129038	AIS Class A Position Report

PGN	Description
129039	AIS Class B Position Report
129040	AIS Class B Extended Position Report
129283	Cross Track Error
129284	Navigation Data
129285	Navigation – Route/WP Information
129291	Set & Drift, Rapid Update
129538	GNSS Control Status
129539	GNSS DOPs
129540	GNSS Sats in View
129794	AIS Class A Static and Voyage Related Data
129809	AIS Class B “CS” Static Data Report, Part A
129810	AIS Class B “CS” Static Data Report, Part B
130306	Wind Data
130310	Environmental Parameters
130311	Environmental Parameters
130312	Temperature
130313	Humidity
130314	Actual Pressure
130316	Temperature, Extended Range
130576	Trim Tab Status
130577	Direction Data
130578	Vessel Speed Components
130816	Self-Test Report
130818	Heading & Attitude Sensor Control Status
130821	NAV Source Select
130825	Shared parameters between FURUNO devices
130826	Multi Sats In View
130833	Device Position and Ship Dimension Report
130834	Position of Speed Measurement
130841	N2K System Setup Information
130845	Multi Sats in View Extended
130846	Motion Sensor Status Extended

Output PGN



PGN	Description
059392	ISO Acknowledgement
059904	ISO Request
061184	Self-Test Group Function
060928	ISO Address Claim
126208	NMEA - Request group function
	NMEA - Command group function
	NMEA - Acknowledge group function
126464	PGN List – Transmit PGN’s group function
	PGN List – Received PGN’s group function
126720	Memory Group Function
	Reset Group Function
	GMM Message
126984	Alert Response
126993	Heartbeat
126996	Product Information
126998	Configuration Information
128793	Instrument Backlight Synchronization
130821	NAV Source Select
130825	Shared parameters between FURUNO devices
130841	N2K System Setup Information

3. HOW TO SET UP THE EQUIPMENT

This chapter shows you how to set up your system according to the equipment you have connected.

Touch control description

The touch control depends on the screen type. The basic operations to use during the installation setup are in the following table.

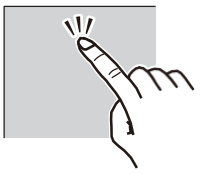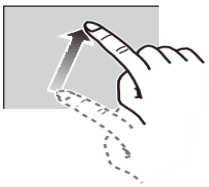Operating by a finger		Function
Tap		• Select a menu item. • Select a setting option where there are multiple options. • Select an object.
Drag		• Scroll the menu.
Pinch	 Zoom in Zoom out	• Zoom in or out when supported by the active application during screen mirroring.

Controls

The RD726/RD926/RD1226W has no physical buttons. User operations are performed using the touch screen. Software-based controls are mainly operated using gestures.

Gestures	Usage Scenarios
Left swipe	Display the next page.
Right swipe	Display the previous page.
Down swipe	Open Home screen or swipe down the list
Up swipe	Close Home screen or swipe up the list
Single tap	Operate Functional buttons, touch areas and other interactive elements
Two-finger tap	Configured via the Settings page
Single long tap	Operate Functional buttons, touch areas and other interactive elements
Two-finger long tap	Configured via the Settings page

3.1. How to Turn the Power On/Off


The RD726/RD926/RD1226W has no physical control buttons. All user operations are performed using the touch screen. The unit turns on when power is supplied and turns off when power is disconnected.

3.2. How to Adjust the Screen Brightness

Screen brightness on the RD726/RD926/RD1226W can be adjusted using the brill box.
There are two methods to open the brill box: accessing it from the Home screen, or calling it up via two-finger touch gestures (pre-configuration required).

Method 1: Access via the Home screen

While an instrument page is displayed, swipe down from the top edge of the screen to open the Home screen, then tap the brill box icon to bring up the brill box.

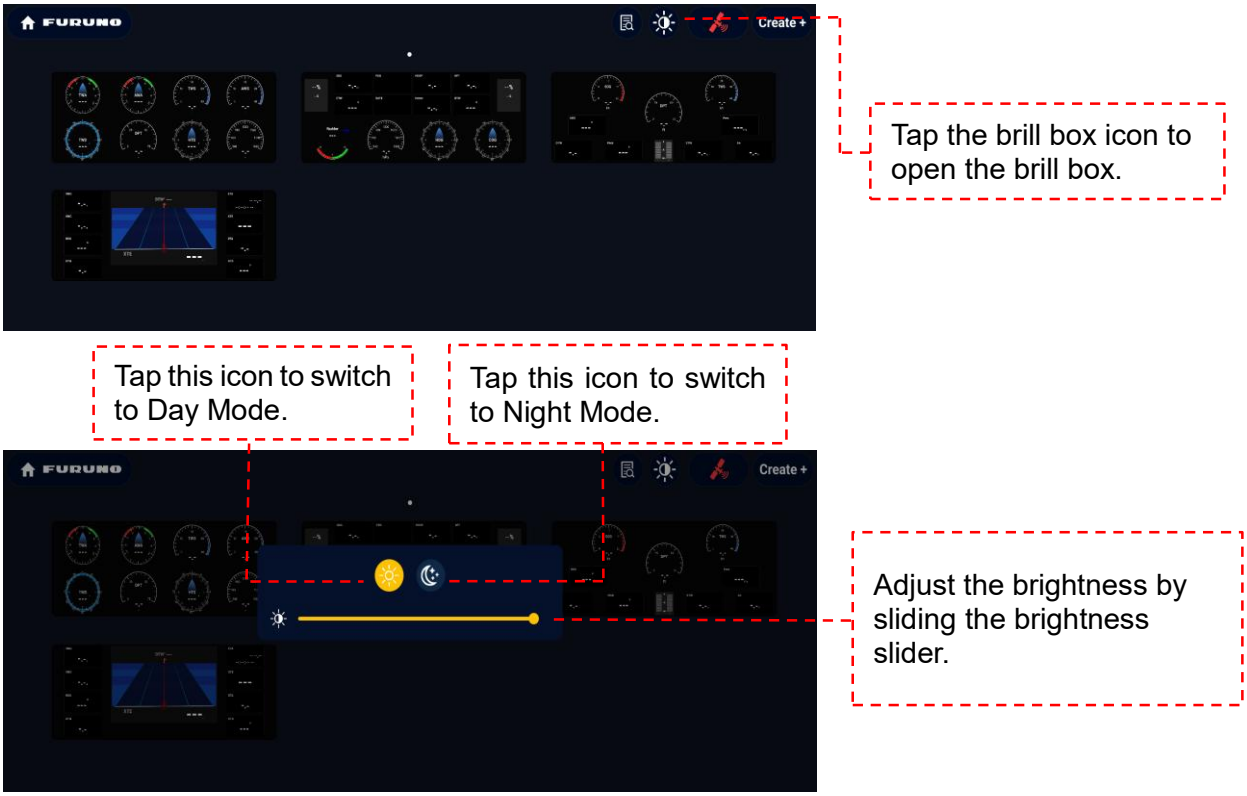

Method 2: Access via Two-Finger Gestures

This function needs to be set up in advance:

1. Open the Home screen and tap the FURUNO logo to enter Settings.
2. Select “General”, then tap “This Display” to open its configuration page.
   Assign brill box to either the Two-finger Tap Function or Two-finger Long Tap Function.
   Once the configuration is complete, perform a two-finger tap or two-finger long tap on the screen to open the brill box.

After setup, use the configured gesture function on the instrument page to open the brill box.

3.3. How to Create a New Page

Two methods are available to create a new instrument page:

1. Tap the create button on the Home screen to open the creation screen.
2. Long-tap on an instrument page to call up the edit menu, then select Add Page.

When creating a new instrument page, a layout selection pop-up window will appear first for you to choose the page type. Two layout types are provided: Freeform Layout and Template Layout.



Tap the create button on the Home screen to open the creation screen.




Long-tap an instrument page to call up the edit menu, then select Add Page.

3.3.1. Freeform Layout

If you select Freeform Layout, a pop-up window for page naming will appear first. Enter a name for the page to open the editing interface.

On this page, you may confirm page creation or cancel to return to the Home screen. Within the editing page, you can freely arrange, add and delete instruments.


Tap any blank area on the editing page to open the Add Instrument menu, which offers these instrument types: GRAPHIC, NUMERIC, GRAPH, TANK, HIGHWAY, TRIM TABS, WEBSERVICE.
Tap End Edit to save the changes and display the newly created page.
Tap Cancel to discard edits and return to the Home screen.

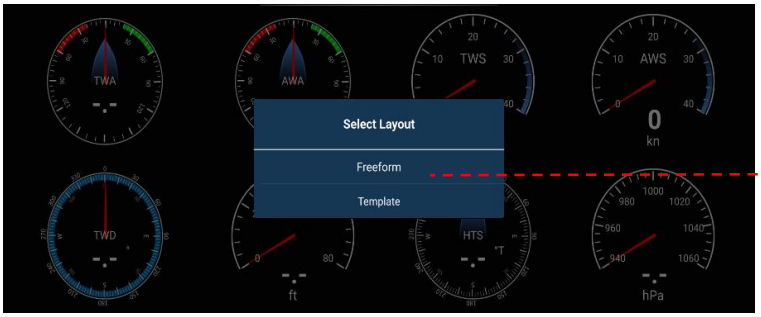

Select “Freeform” layout.



Enter a name for the new page.

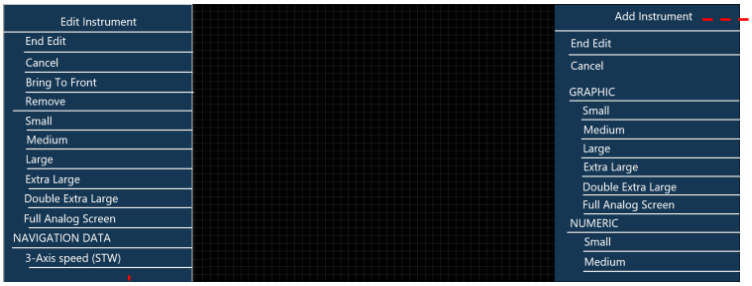

Tap the blank area to bring up the Add Instrument menu.
Tap End Edit to save changes and switch to the new page.
Tap Cancel to exit and return to the Home screen.


Tap an existing instrument to bring up the Modification menu.
Tap End Edit to save changes and display the page.
Tap Cancel to exit and return to the Home screen.

3.3.2. Template Layout

If Template Layout is selected, a page naming pop-up window will appear first. Enter a page name to access the editing interface.

Different from Freeform Layout, Template Layout requires setting the instrument grid size upfront. Available options are Single Instrument, 2×2 Instruments, 2×3 Instruments and 3×3 Instruments.

Once the grid size is confirmed, you may start editing the page. All remaining operations are identical to those of Freeform Layout.

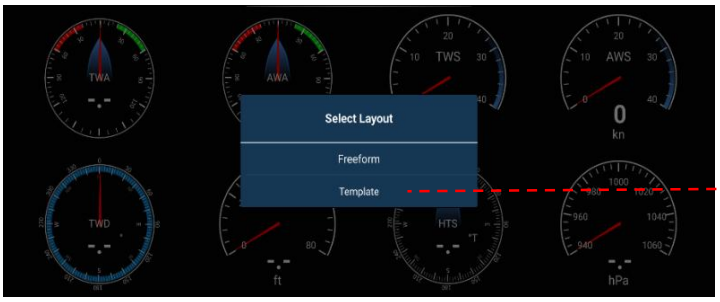

Select “Template” layout.



Select the desired instrument grid layout.

3.4. How to Delete Pages


Two methods are provided to delete instrument pages:

1. Long-tap the corresponding thumbnail on the Home screen to enter deletion mode.
2. Long-tap on an instrument page to open the edit menu, then select Remove Page to delete the target instrument page.

The complete deletion procedure is shown below:

1. Trigger instrument page deletion

2. Confirm deletion in the pop-up confirmation window.
   The page and its corresponding thumbnail are deleted.

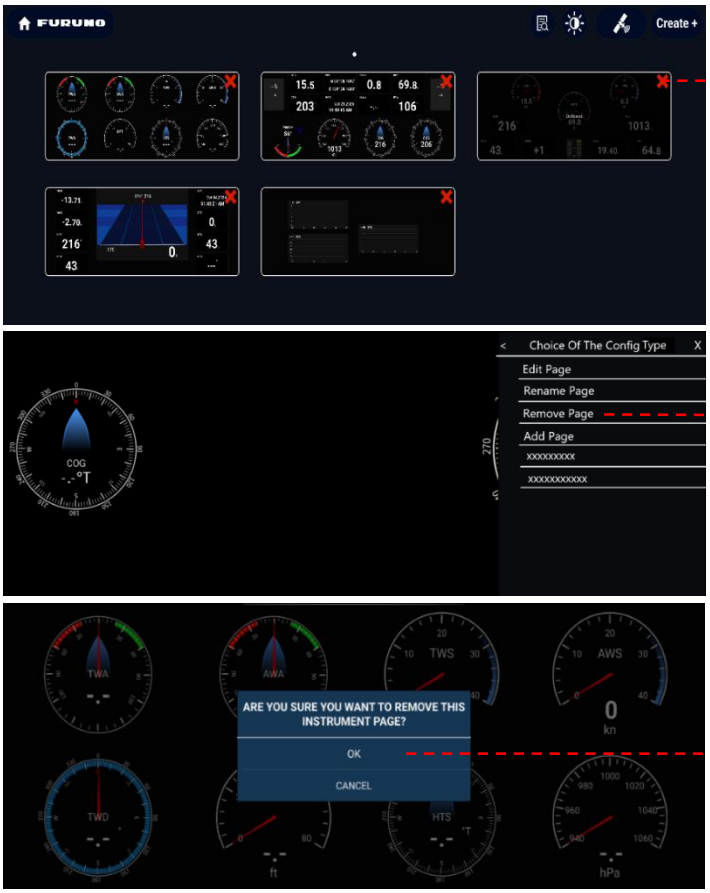

Long-tap the page thumbnail to enter delete mode.

Long-tap on an instrument page and select “Remove Page”.


Tap “OK” to delete the page.

3.5. How to Edit Pages

Modifying instrument pages covers two main functions: renaming the page and editing page content.

Long-tap on an instrument page to open the edit menu. Tap Rename Page to modify the page name, or tap Edit Page to access the page editing interface.

All operations available within the editing screen — including End Edit, Cancel, editing existing instruments and adding new instruments — are the same as those used when creating a new instrument page.

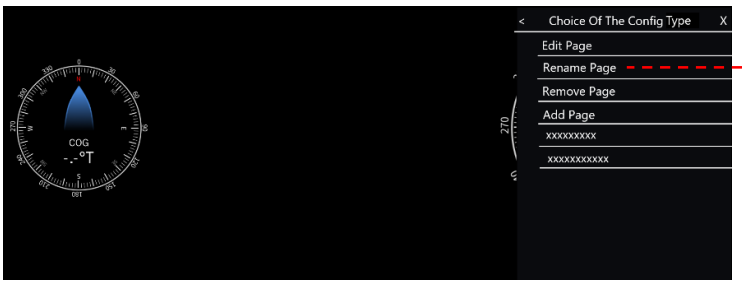

Tap Rename Page to rename.
Tap Edit Page to modify page.

3.6. How to Upgrade Firmware via USB

When a system upgrade is needed, prepare a USB flash drive with the upgrade package. Put the compressed upgrade file in the root directory of the USB drive, then plug the drive into the USB Type-C port on the rear of the unit.

Navigate to Settings > General > About, then tap Check Version on the About page to scan for and install new firmware. If a newer version is detected, follow the on-screen prompts to finish

the upgrade. You may monitor the upgrade progress through system notifications.

3.7. How to Use Screen Mirroring

The system supports iPhone screen mirroring with touch control. The operation steps are as follows:

1. Enable Zoom on iPhone (Required for touch control only)
   Before connecting, unlock your iPhone and return to the Home screen. Navigate to Settings > Accessibility > Zoom, then turn Zoom on. This setting is required for touch control only.
2. Power on the unit
   Connect the power cord to the unit's power port and a suitable power supply. The unit will boot automatically and display the main instrument interface. Screen mirroring remains inactive at this stage.
3. Wired connection to iPhone
   Use the USB Type-C cable supplied with the optional Screen Mirroring Kit (sold separately). Connect one end to the iPhone's USB Type-C port and the other to the unit's USB Type-C port.
   Screen mirroring starts automatically once the connection is established.
4. Screen mirroring and touch control
   Operations on the iPhone: Swipes, taps and text input performed on the phone are shown on the unit's display.
   Operations on the unit: Tap or swipe within the mirrored image to control the iPhone. In supported applications, two-finger gestures can also be used to zoom or rotate. Touch control requires Zoom to remain enabled on the iPhone.
5. End screen mirroring
   Unplug the USB Type-C cable to stop screen mirroring and touch control. The unit will return to its main interface.

Note 1: Screen mirroring has been verified with selected iPhone models equipped with a USB Type-C connector. iPhone Air models and iPhone e models have not been verified. At the time of publication of this manual, screen mirroring operation has been confirmed with the following iPhone models and iOS versions.

iPhone models:
iPhone 15/ iPhone 15 Plus / iPhone 15 Pro Max / iPhone 16 Pro / iPhone 17 / iPhone 17 Pro Max / iPhone 18 Pro

iOS versions:
iOS 26.5.1 / iOS 26.6.2 / iOS 27.0.1

Operation with other iPhone models, iOS versions, or future software updates has not been verified.

Note 2: Use only the USB Type-C cable supplied with the Screen Mirroring Kit. The supplied cable is designed to support the video signal required for screen mirroring and to maintain the waterproof integrity of the USB Type-C connection on the unit. Other USB Type-C cables may not support screen mirroring or provide a waterproof connection.

Troubleshooting Tips


- No mirrored image: Unlock the iPhone, and make sure that the USB Type-C cable supplied with the Screen Mirroring Kit is securely connected at both ends.


- Screen mirroring stutters or freezes: Check that both connectors are fully inserted. Reconnect the cable.


- Touch control does not respond: Confirm that Zoom is enabled on the iPhone and that you are touching within the mirrored image.

APPX. 1 OUTLINE DRAWINGS


RD726 OUTLINE

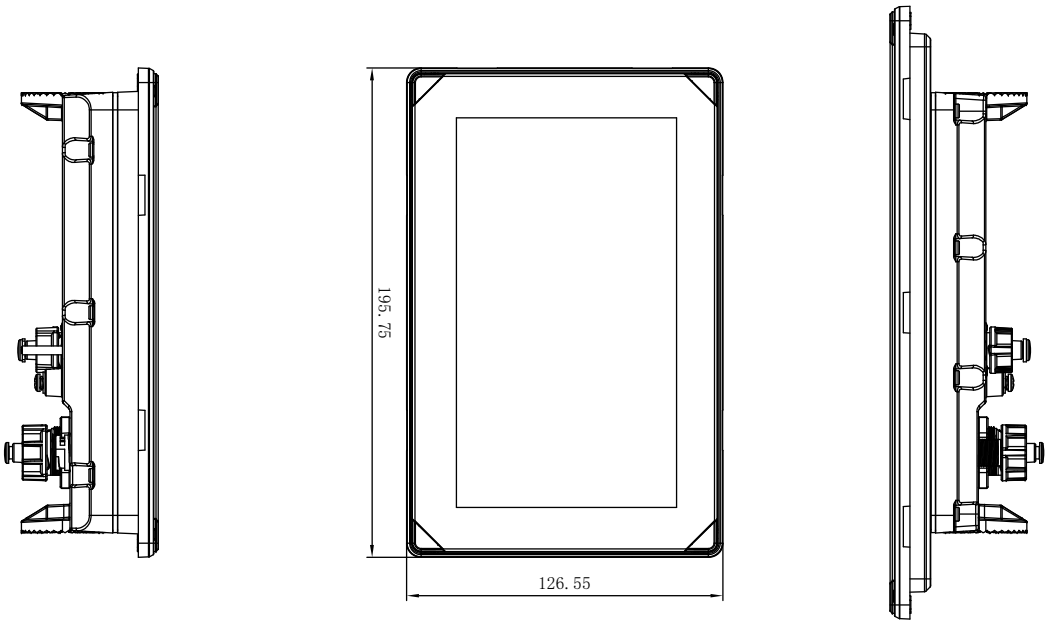


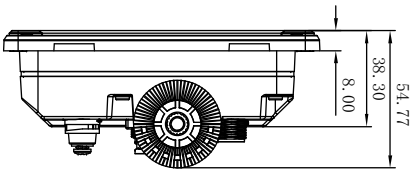


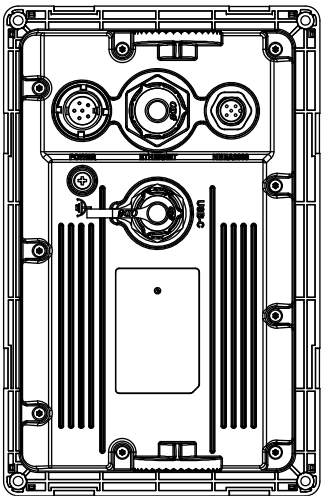

RD926 OUTLINE

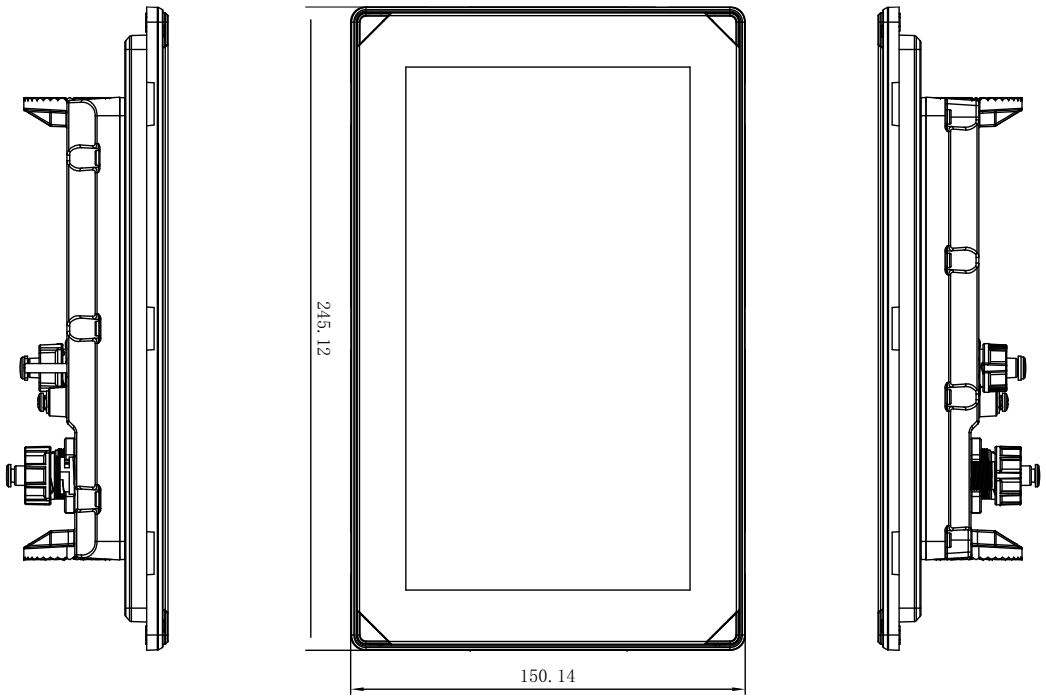


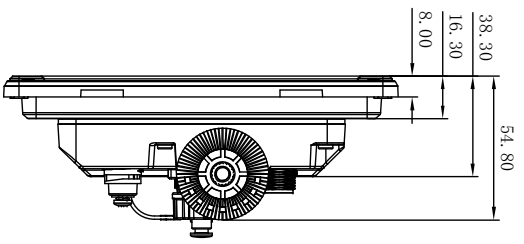

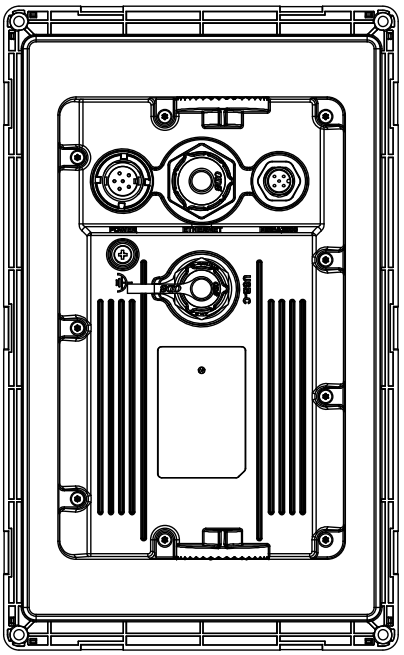

APPX. 1 OUTLINE DRAWINGS

RD1226W OUTLINE

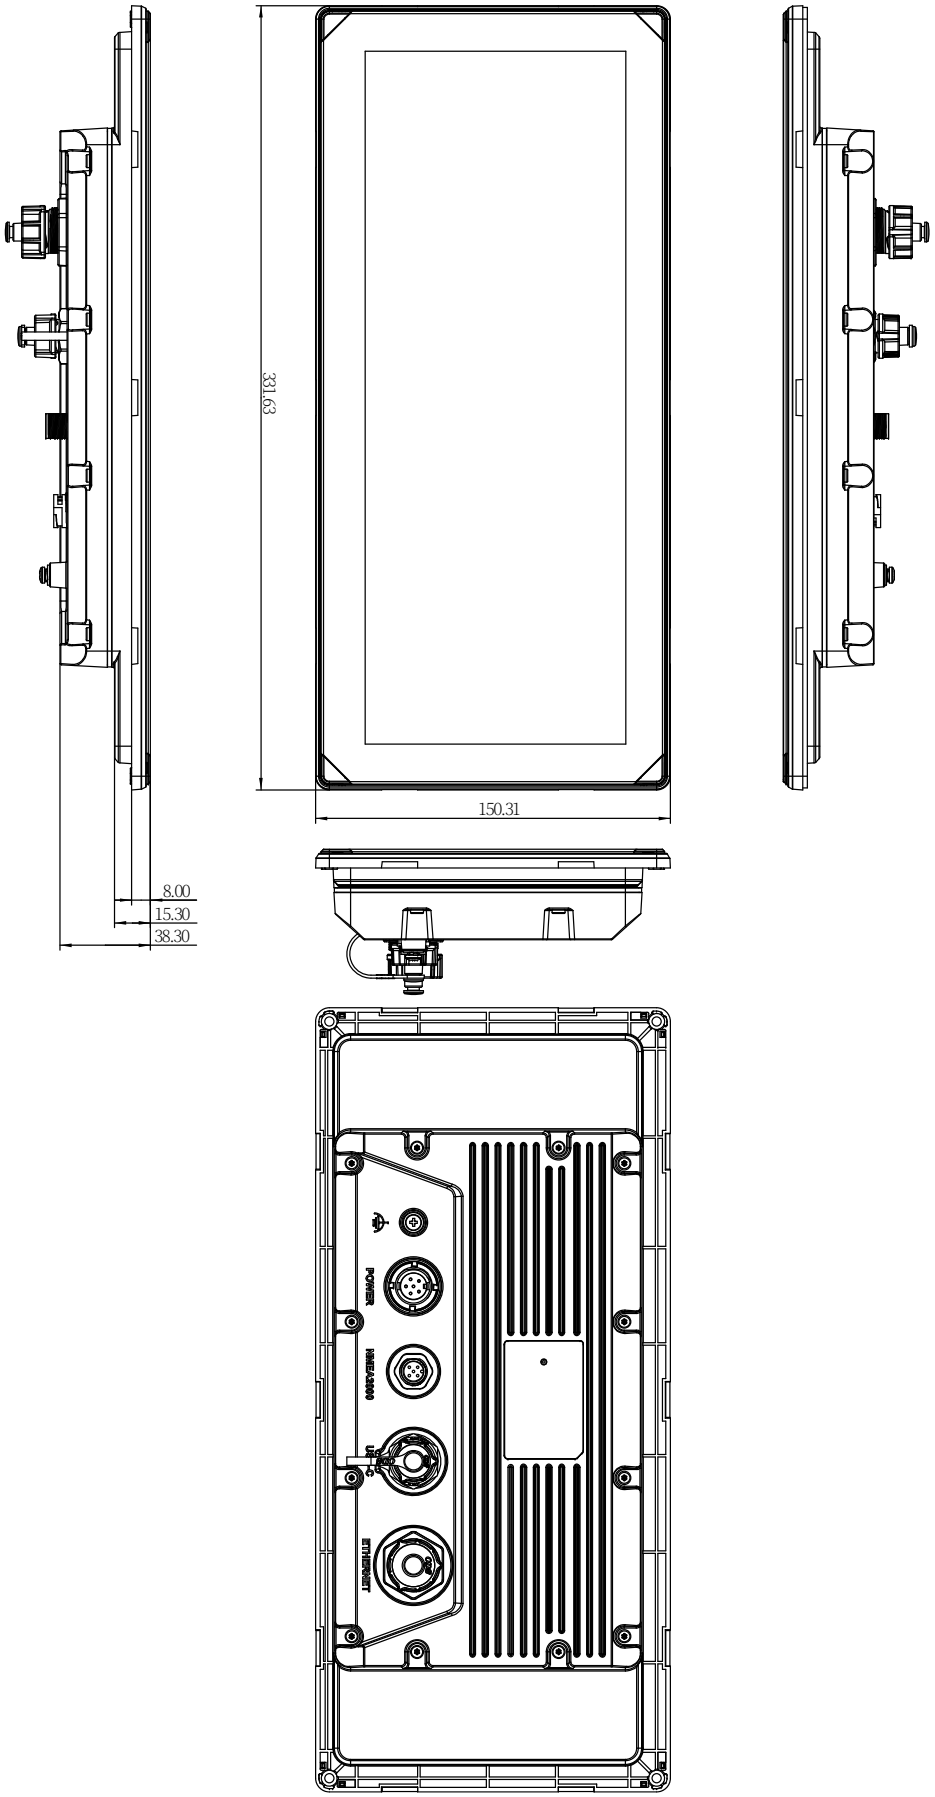

This page is intentionally left blank.

This page is intentionally left blank.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

All rights reserved.

FURUNO Authorized Distributor/Dealer

A : Nov 2026

Pub.No.IME-52029903631 31A

5 2 0 2 9 9 0 3 6 3 1 3 1 A